PRE INSTALLATION CHECKLIST

<u>IMPORTANT NOTICE</u>: If you have purchased a STI 6400/WIR model, before installation you will need to 'learn' the transmitter to the 8 channel receiver. Please refer to the Quick Setup Guide. Once 'learned', follow steps 1-7 opposite.

DO YOU WANT HIGH OR LOW SOUNDER OUTPUT?

The Exit Stopper is factory set for HIGH sounder output (105 dB). To change the unit to a LOW output (95 dB), locate IP2 and move to the OFF position.

DO YOU WANT THE EXIT STOPPER TO ALARM IMMEDIATELY?

The Exit Stopper is factory set to arm immediately after the key is turned to the ON position. You can change this to a 15 second arming delay. This feature allows an authorised key holder to turn the unit on and then exit through the door before the unit arms. To set a 15 second arming delay move jumper JP7 to the OFF position.

DO YOU WANT THE EXIT STOPPER TO ACTIVATE IMMEDIATELY THE DOOR IS OPENED?

The Exit Stopper is factory set to activate immediately the protected door is opened. The unit can be set for a 15 second delay. This would allow an authorised key holder to open the door and turn the Exit Stopper off before it activates. To set to a 15 second activation delay move the jumper to JP5 to the ON position.

SOUNDER OUTPUT OPTIONS

The Exit Stopper is factory set to sound for 30 seconds once activated. There are three other settings, 180 seconds, continuous and 5 beeps.

SPECIFICATIONS

Housing	3mm 1/8" polycarbonate
Power Source	9 VDC Alkaline
Sounder Output	95 dB - low/105 dB - high
Relay Output	9 VDC, 40mA
Dimensions	136mm/5.35" h x 136mm/5.35" w x 50mm/1.97" d
Standby Current	10uA
Alarm Current	200mA

FYIT STOPPER PART NIIMRERS

EATT STUPPER PART NUMBERS				
PART No. DESCRIPTION				
STI 6400	Exit Stopper			
STI 6402	Exit Stopper Double Door			
STI 6400/RK	Remote Kit			
STI 6400/RS	Remote Sounder			

ACCESSORIES

ACCESSORIES				
PART No.	DESCRIPTION			
STI F021	Tamperproof Tool			
STI CO23/A	Spare Keys			
STI BAT1	9 V Battery			
STI L6400	Emergency Exit Warning Sign			

STI

Safety Technology International (Europe) Ltd Unit 49G, Pipers Road, Park Farm Ind. Est., Redditch Worcs, B98 OHU, UK

Telephone: +44 (0) 1527 520 999 Fax: +44 (0) 1527 501 999 Email: info@sti-europe.com Web: www.sti-europe.com



ID6400-6400WIR · Revised 12/14-001 · Printed in England


EXIT STOPPER


A completely self-contained security system that provides a highly effective, extremely versatile and inexpensive way to help prevent unauthorised use of fire/emergency doors. The EXIT STOPPER is supplied with an installation kit and 9v alkaline battery. It also incorporates a key override facility for authorised use.

INSTALLATION DATA FOR THE STI6400 & STI6400/WIR


- 1. Make sure key switch is in the OFF position.
- Remove cover from base unit by applying pressure to the key barrel. Ensure that the tamper screw located on the bottom right hand side is removed by using the tamperproof tool provided.
- Set switches, on circuit board, to desired alarm settings (figure 4 see over).
- 4. Mount base unit on or next to door using the 2 fixings provided. (See Dia. A for recommendation*). Reed switch mounting locations can be moved to the four positions shown in Dia. A. If mounted next to door, route reed switch wire through knockout in bottom of housing as shown in figure 2.
- Mount magnet on door frame
 (or door if unit is mounted next to
 door) using screws provided. When
 mounting on metal doors or door
 frames, use plastic spacer provided.
 Reed switch and magnet must be
 within 13mm/1/2" when door is
 closed. Please refer to figures 5,
 6 and 7 for other mounting options.
- 6. To fix the cover to the base unit, hooks can be found on the inside top edge of the cover. Insert the hooks into the slots provided on the edge of the base unit (see Dia. B) and snap the cover down until it clicks into place. Using the tamperproof tool provided insert and tighten the screw to secure the cover to the base (see Dia. C).
- REMOVING THE COVER FROM THE BASE Remove the tamper screw located on the bottom right hand side with the tamperproof tool provided. Apply pressure to the key barrel. Keep the tamperproof tool safe for future servicing and battery change.

FIGURE 1

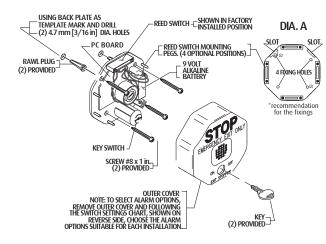

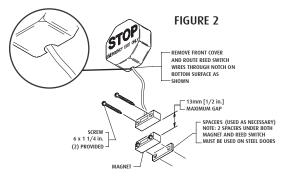

VIEW SHOWING MAGNET INSTALLATION NB: FITTING UNIT AWAY FROM DOOR (OPTIONAL)

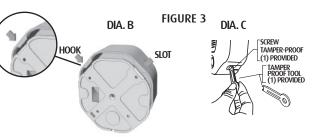

VIEW SHOWING HOW TO FIX THE COVER TO THE BASE

MOUNTING OPTIONS

VIEW OF CIRCUIT BOARD ALARM VOLUME SWITCH (ON) JP2 TERMINAL BLOCK IMMEDIATE ARMING ACTIVATION (OFF) JP5 (OFF) JP4 ALARM DURATION SWITCH (OFF) JP3 (FACTORY DEFAULT SETTINGS)

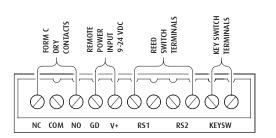


FIGURE 4

ARMING SWITCH (ON)


TERMINAL BLOCK WIRING CONNECTIONS

FEATURE	JP2	JP3	JP4	JP5	JP7
High Volume* (105 dB)	ON*				
Low Volume (95 dB)	OFF				
Immediate Arming*					ON*
15 Second Arming Delay					OFF
Immediate Arming Activation*				OFF*	
15 Second Activation Delay				ON	
30 Second Alarm Duration*		OFF*	OFF*		
180 Second Alarm Duration		OFF	ON		
Continuous Alarm Duration		ON	OFF		
Door Prop Mode (5 Beeps)		ON	ON		

*Factory Settings


NOTE: Slide black lever to desired ON/OFF position as labelled on circuit board


TYPICAL FLUSH MOUNT DOOR JAM INSTALLATION

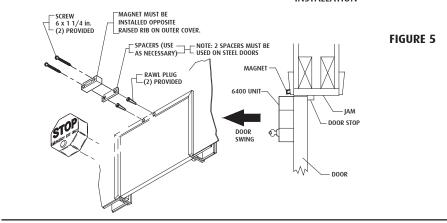

TYPICAL RECESSED MOUNT DOOR JAM INSTALLATION



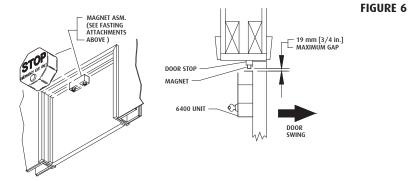

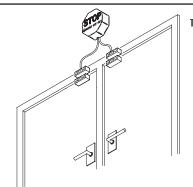

TYPICAL DOUBLE DOOR INSTALLATION STI 6402

FIGURE 7

ID6400-6400WIR· Revised 12/14-001 · Printed in England