



american security equipment company

CORPORATE OFFICE & WAREHOUSE
 228 EAST STAR OF INDIA LANE
 CARSON, CALIFORNIA 90748
 PHONES: (213) 538-4670 (800) 421-1096
 TELEX: 69-8241

EASTCOAST OFFICE & WAREHOUSE
 100 FORD ROAD BLDG. 4
 DENVER, NEW JERSEY 07834
 PHONES: (201) 625-2200
 (800) 526-1080



AMC-1 MONEY CLIP SWITCH

INSTALLATION INSTRUCTION


Common black is closed to red, open to white with money inserted.

Install in largest denomination bill compartment to reduce likelihood of false alarms. In cash drawers, connect money clip leads to door cord. Where possible, install retractable cord so that drawer motion makes cord extend/retract rather than flex at terminal blocks.


FALSE ALARM REDUCTION:

Where subscriber working conditions increase the likelihood of false alarms and the holdup alarm system requires only an N.O. or N.C. contact, consider installing two money clips at each station, wired so that both clips must be emptied to cause an alarm:




FOR CONNECTION TO DIRECT WIRE TYPE HOLDUP TRANSMITTER:

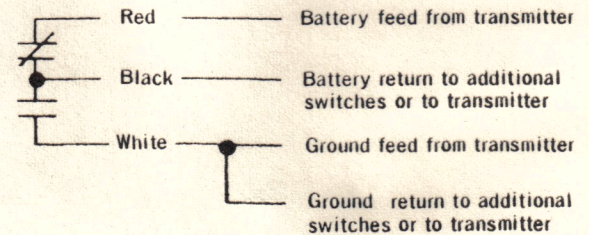


FOR DIRECT ACTUATION OF A McCULLOH CODE GENERATOR (no control required):

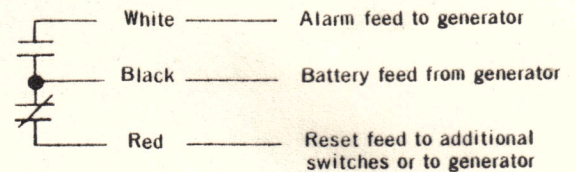

FOR DIRECT ACTUATION OF A CURRENT INTERRUPTION TYPE ALARM RECEIVER:

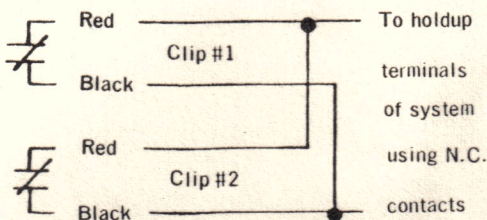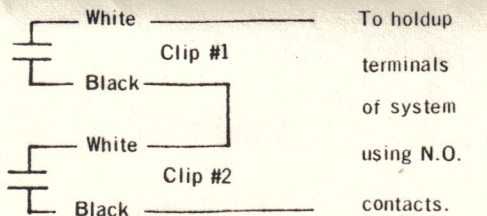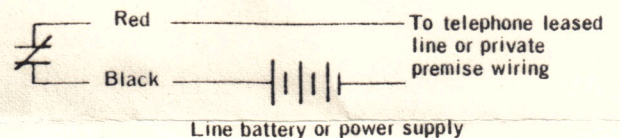


FOR CONNECTION TO HOLDUP TERMINALS OF CONTROL INSTRUMENT OR TRANSMITTER:

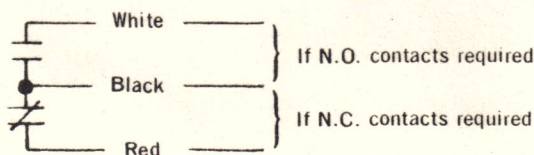

OPERATION

Insert two new bills in clip. Put remaining bills on top of clip. Remove only top bills in usual course of business. In case of holdup, removing all bills causes holdup alarm.

To remove bills from clip without causing alarm, insert check or other bill-sized paper into clip before removing bills.

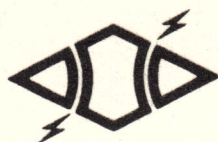

Division of Kobishi-America Inc.