



Video Server

User Manual Ver. 3.2

Jan. 2008

Advanced Information

Etrovision Proprietary and Confidential

Disclaimer

© 2007 Etrovision Technology. All rights reserved.

Etrolink™ & AnyUSB™ are trademarks of Etrovision Technology; other product or service names mentioned herein are the trademarks of their respective owners. Information contained in this document may be superseded by updates. No representation or warranty is given and no liability is assumed by Etrovision Technology with respect to the accuracy or use of the information, or infringement of patents or other intellectual property rights. No licenses are conveyed, implicitly or otherwise, under any intellectual property rights.



107.933

About this document

Applied models:

- EV3130AW
- EV3130A
- EV3131

This user manual is intended for administrator and/or user of Etrivision EV3130A/AW & EV3131 Video Servers. Operational instructions & network configuration are elaborated. Prior knowledge about network setup and configuration will be helpful.

IMPORTANT

- ✓ Check **PC specification requirements.**
- ✓ Check **OS platform requirements.**
- ✓ Install **EtroStation™** software before you start working with video server.
- ✓ Read special notes and important configuration information.

TABLE OF CONTENTS

1. PRODUCT OVERVIEW	5
PACKAGE & CONTENTS	6
2. PRODUCT CD	6
3. BEFORE YOU INSTALL SOFTWARE	7
4. LANGUAGE SUPPORT	7
5. HOUSING AND CONNECTORS	7
EV3131.....	7
EV3130A/AW.....	8
6. FIRST TIME USE INSTRUCTIONS (READ CAREFULLY)	9
INSTALL ETROSTATION™.....	9
WHICH BROWSER TO USE?	9
POWER ON VIDEO SERVER.....	9
CONNECTING TO NETWORK.....	9
FACTORY SETTING - INITIAL IP ADDRESS.....	9
NETWORK DOMAIN.....	10
USING ETROSCAN™.....	10
CHANGE NETWORK SETTINGS BY ETROSCAN™.....	11
7. ACCESS VIDEO SERVER	12
BROWSER.....	12
INITIAL USERNAME & PASSWORD.....	13
VIEWING PAGE.....	13
CONTROL PANEL SETTINGS	15
8. WEB INTERFACE SETTINGS	18
STATUS.....	18
NETWORK.....	19
<i>STATIC IP</i>	19
<i>DYNAMIC IP</i>	20
<i>PPPoE SETTINGS</i>	21
WIRELESS (ONLY FOR EV3130AW MODEL)	22
<i>Wireless SETTINGS</i>	22
<i>Station SETTINGS</i>	23
VIDEO.....	27

<i>VIDEO SETTINGS</i>	27
<i>COLOR SETTINGS</i>	29
<i>VIDEO PREVIEW</i>	29
<i>MAX CLIENT LIMIT</i>	30
EVENT RULE	30
<i>EVENTS HANDLED</i>	32
<i>ACTIONS TRIGGERED</i>	33
<i>RULE LISTS - ADDING/DELETING</i>	33
<i>MODIFYING RULE LISTS</i>	33
SCHEDULED CAPTURE	34
DATE & TIME	35
OSD	36
PTZ CONTROL	37
PORT	37
DDNS	38
SMTP/FTP	39
<i>E-MAIL - SMTP SETTINGS</i>	40
<i>FTP SETTINGS</i>	40
TRIGGER SETUP	41
<i>Digital INPUT</i>	41
<i>PERIODIC TIMER</i>	41
<i>MOTION DETECTION</i>	42
<i>Video Loss</i>	43
PRE/POST SETTING	44
SD CARD	44
ACCOUNT	45
SECURITY	47
MAINTENANCE	48
9. FACTORY DEFAULT	49
10. REBOOT	49
11. LOGOUT	50
12. ETROLINK™ CONFIG PORT - FIRST TIME EXPERIENCE	51
SUPPORTED OS	51
NO SOFTWARE INSTALLATION REQUIRED	52
STEPS FOR USING ETROLINK™ CONFIG PORT (<i>WINDOWS XP PC</i>)	52
WHAT IF QUICKCONFIG DOES NOT AUTORUN?	57

1. PRODUCT OVERVIEW

EV3130A/AW & EV3131 are stand-alone video/audio streaming servers designed for professional IP surveillance applications. With embedded web viewer, streaming video/audio over network can be accessed like browsing a website.

Both EV3130A/AW & EV3131 are capable of encoding MJPEG/MPEG4 streaming.

Major differences are...

Features	EV3130AW	EV3130A	EV3131
Video In	X	X	X
Video Out	X	X	-
Audio In	X	X	-
Audio Out	X	X	-
PTZ	X	X	X
DI / DO	X	X	-
SD Card	X	X	-
Wireless	X	-	-

EV3131 & EV3130A/AW features the proprietary Etrolink™ config port, making it the only digital surveillance product in the market with proprietary design for "**Ease-of-use**", "**Reliability**", and "**Manageability**".

PACKAGE & CONTENTS

EV3131



EV3130A



EV3130AW



- Video server unit X 1
- Power adapter X 1
- USB cable X 1
- Terminal block connector X 1
- Wall mount Frame + screws (EV3130A/AW ONLY)
- Product CD X 1

2. Product CD

Product CD in the package contains the following:

- ✓ EtroStation™ NVR management software
 - 16CH Live View / Recording / 4CH Playback
- ✓ User Manuals
- ✓ Etrovision Product Brochures

3. BEFORE YOU INSTALL SOFTWARE

- ✓ PC running Microsoft Windows 2000 or Windows XP is only capable of running EtroStation™ software.
- ✓ PLEASE go through EtroStation™ users' manual before installation to check further PC requirements in order to ensure smooth software operation.

4. LANGUAGE SUPPORT


- ✓ ENGLISH

NOTE

EtroStation™ setup will auto-run when inserting product CD. Pay attention to dialog box questions before you press OK button.

5. HOUSING and CONNECTORS


EV3131

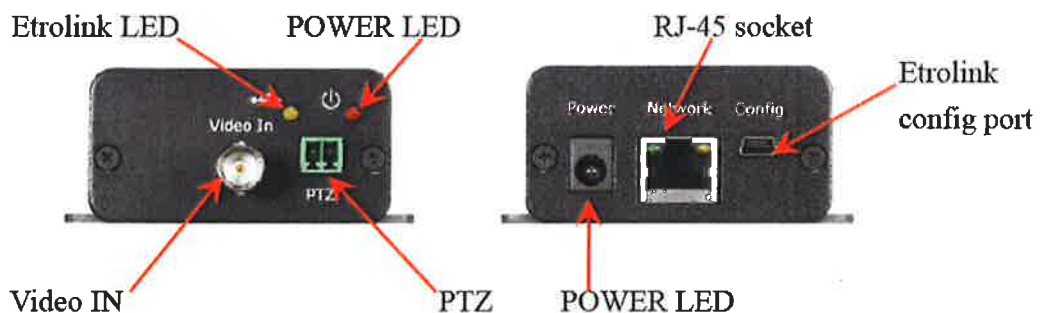


EV3130A/AW



LED indicators

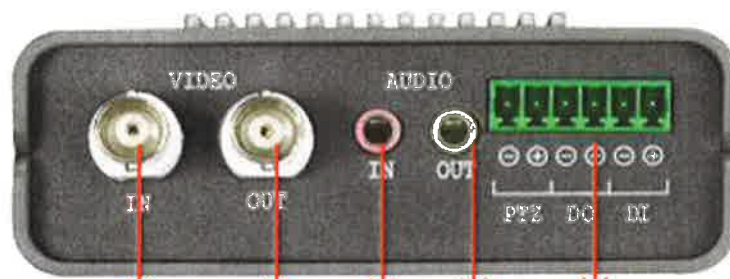

Video IN Video Out Audio In Audio Out RS-485 (PTZ), DO & DI

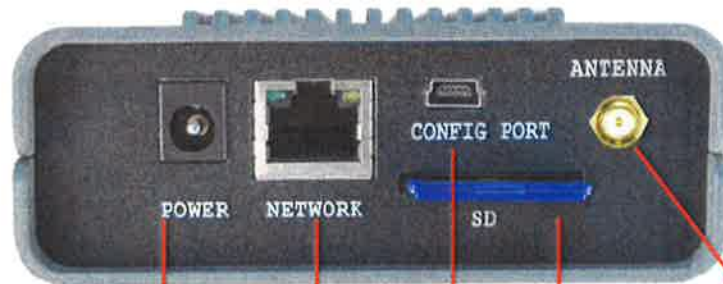

Power socket RJ-45 socket Etrolink™ port SD Socket Antenna port (EV3130AW ONLY)

6. FIRST TIME USE INSTRUCTIONS *(read carefully)*

INSTALL ETROSTATION™

Install **EtroStation™** software. **EtroScan™** is a software utility to find your video server on the network. It is a part of EtroStation™.

WHICH BROWSER TO USE?

We strongly recommend Microsoft IE browser version 6 or higher. Mozilla Firefox and similar others are not guaranteed to work with EV3131 / EV3130A/AW.

POWER ON VIDEO SERVER

Power on video server by using power adapter provided in the product package. Connect power adapter to 110-220v AC socket.

CONNECTING TO NETWORK

Connect a standard CAT5 Ethernet cable to R45 socket on EV3131 / EV3130A/AW and connect other end to your network hub/switch. Make sure the PC you want to access EV3131 / EV3130A/AW is on the same network domain.

FACTORY SETTING - INITIAL IP ADDRESS

IP Address : 192.168.1.2

Gateway : 192.168.1.1

NETWORK DOMAIN


Change the IP of the PC you want to access EV3131 / EV3130A/AW inline with 192.168.1.2. You can change the video server IP later as per your convenience using **EtroScan™** as described below.

USING ETROSCAN™

EtroScan™ software is the quickest way to make sure we can find EV3131 / EV3130A/AW on your network. **EtroStation™** setup will install two applications. You can see as shown below.



Select **EtroScan™**. The following window appears after you select "EtroScan™" from start menu.

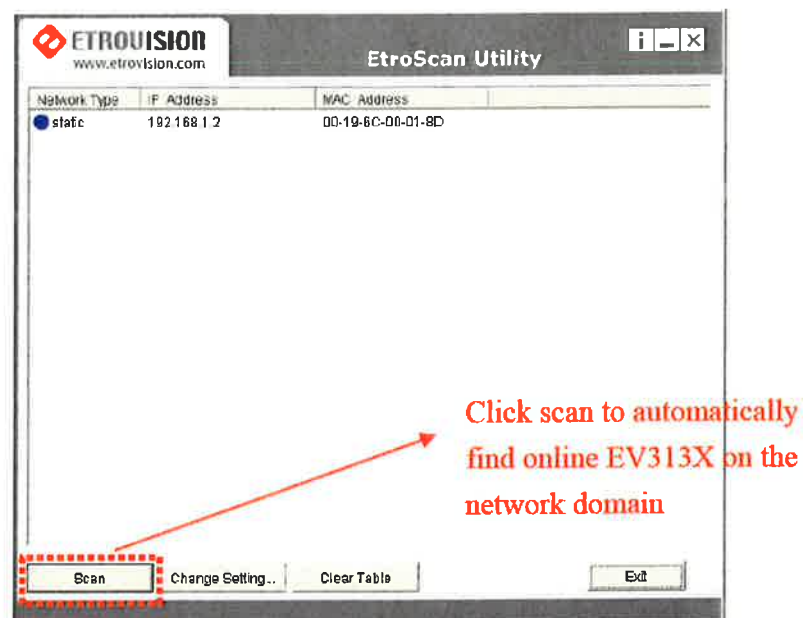

Press **Scan** button to list the IP and MAC address table. To refresh, press **Clear Table** and press **Scan** again.

You will find the list of IP and MAC address listed. To identify your EV3131 / EV3130A/AW you can flip over the video server and on the bottom side you check the label for MAC address.

MAC Address:00196C300747
Serial Number:J343000323




J343000323

MADE IN TAIWAN



CHANGE NETWORK SETTINGS BY ETROSCAN™

You can double click a specific IP address and change some basic network parameters. A dialog box will appear as follows.

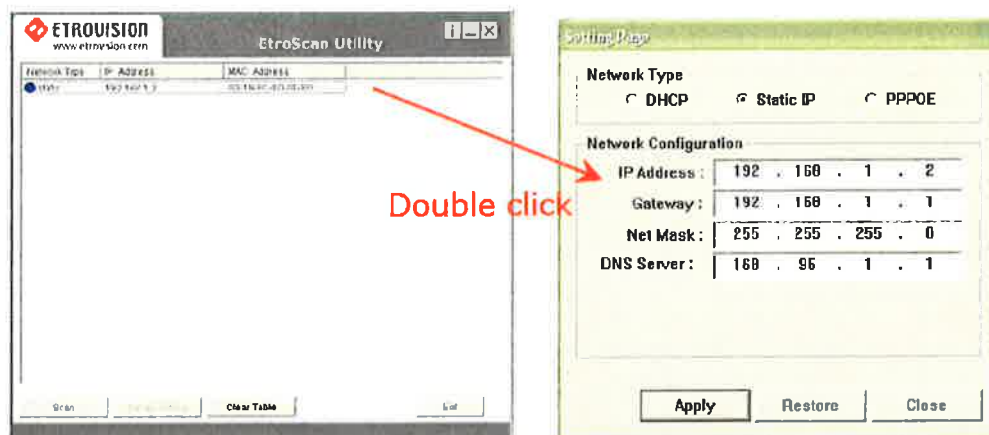

Change any settings you want to make and make sure you have correct values in all fields. Click **Apply**.

Within 10 seconds, the dialog box should disappear to indicate new settings are accepted and being applied. Wait for around 30 seconds, before trying to refresh IP list. Click **Clear Table** and click **scan** again.

You should be able to find MAC address of video server under new IP address. EV3131 / EV3130A/AW is online on your network. Use **ping** command from Windows command prompt to double check if IP is reachable.

TIP**"DOUBLE RIGHT CLICK" ADVANTAGE**

If you want to quickly open the IP you see on Etroscan™ on your browser, select an IP and do a "double right click" on your mouse/touchpad. You can see the browser window open that IP.

To quit **Etroscan™** anytime, click **Exit**.

7. ACCESS VIDEO SERVER


BROWSER

- Open IE browser
- Type IP address of video server that you found on **EtroScan™** software. For ex. **default IP is 192.168.1.2**
- Initial username and password are...

Login: root

Password: pass

Click **Login** button to go to web view.

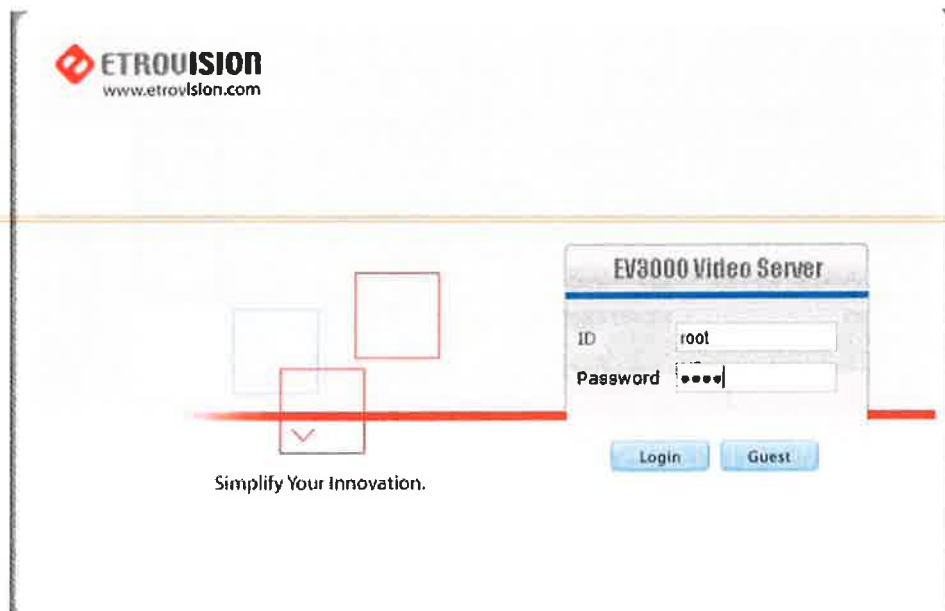

INITIAL USERNAME & PASSWORD

Administrator

- Default ID/Password = **root/pass**.
- Only password is changeable.
- Full access right to view, control system settings.

Guest accounts

- ID/Password not necessary.
- Basic view and some action buttons can work.

VIEWING PAGE

After successful log in as **Guest**, the viewing page will appear as follows.

The "**camera info**" button when clicked shows FPS, camera name and resolution values. This applies to all EV3130A/AW & EV3131 MODELS.



Guest Mode Viewer

When you log in successfully with ROOT/PASS as **administrator**, the viewer screen will display as shown below.

EV3130A/AW Live Viewer (Admin Mode)



EV3131 Live Viewer (Admin Mode)



1. Notice top right corner of viewing page

EV3000 Video Server



has a toggle button to take you between web configuration page & viewing page. Always click that if you want to move from one page to the other.

2. Several controls options are available on the right side.
3. OSD is displayed on top left corner of the screen (time, date, camera name)



CONTROL PANEL SETTINGS

➤ Video/Resolution

Following table describes resolution values for each video format


Resolution	CIF	QCIF	D1
NTSC	352X240	704X480	720X480
PAL	352X288	704X576	720X576



➤ Video \ Bit rates

- Choose a particular value and it is applied within few seconds. Video on the screen will pause briefly.

32K / 64K / 128K / 256K / 384K / 500K / 750K /
1M / 1.5M / 2M / 3M (bps)

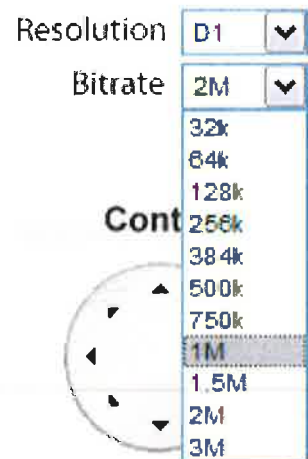

➤ Audio \ Enable check box (only EV3130A/AW)


- Enable or disable function for audio will result in video flicker for a second and then return back to normal. This is not an error.

Audio

Enable

➤ P/T/Z controls (will need PTZ controller)

- Z (Zoom): zoom in (+) / zoom out (-).
- Pan/Tilt.
- F (Focus): focus in (+) / focus out (-).

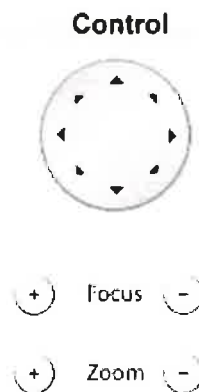

➤ Camera Information.

- Shows video information of the transferred data on the upper left corner of the video screen such as frame rate (fps), channel



name, resolution.



➤ Digital Output (only EV3130A/AW)

- When enabled, DO provide contact close and acts purely as a switch.



Digital Output

8. WEB INTERFACE SETTINGS

EV3131 / EV3130A/AW built-in web interface offers more advanced settings. On the main viewing page, click icon located on top-right side to enter server settings page. It is a toggle button to switch between Config and viewer pages.

EV3000 Video Server

REC [Camera Icon] [Document Icon]

ETROVISION
www.etrovision.com

EV3000 Video Server [Document Icon]

Status

Network Status (Wired)

MAC Address	00:19:6C:30:04:99
IP Address	169.254.100.100
Subnet Mask	255.255.255.0
Gateway	169.254.100.254
Default DNS	168.95.1.1

Network Status (Wireless) - Active

MAC Address	00:0E:8E:16:5C:58
IP Address	169.254.100.100
Subnet Mask	255.255.0.0
Gateway	
Default DNS	168.95.1.1

Model Info

Model	EV3000
Serial Number	J148001077
Firmware Version	2.2.8 Build 20080125

Menu:
[Status](#)
[Basic](#)
[Network](#)
[Wireless](#)
[Video](#)
[Event Rule](#)
[Scheduled Capture](#)
[Date / Time](#)
[OSD](#)
[Expert](#)
[PTZ Control](#)
[Port](#)
[DDNS](#)
[SMTP/FTP](#)
[Trigger Setup](#)
[Pre/Post Setting](#)
[Account](#)
[Security](#)
[Maintenance](#)
[Factory Default](#)
[Reboot](#)
[Logout](#)


STATUS

- Initial view of web Config interface is status page.
- Hardware & Firmware information along with network status such as current IP and related details are clearly shown.
- Network Status (Wireless) - Active section will be **ONLY** displayed

on EV3130AW model

NOTE

Remember to press "OK" after you have changed settings in a particular settings page which has "OK" button. After few seconds, you can see a confirmation dialog box informing that settings have been updated. Pressing OK will return to the same page.

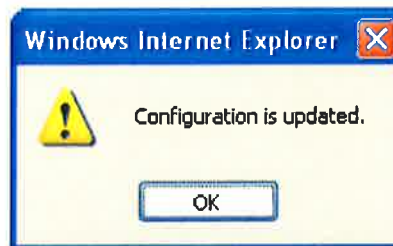

NETWORK

Three configuration types are available for wired network connection
STATIC, DYNAMIC & PPPoE.

STATIC IP



EV3000 Video Server

[Status](#)
Basic
[Network](#)
[Wireless](#)
[Video](#)
[Event Rule](#)
[Scheduled Capture](#)
[Date / Time](#)
[OSD](#)
Expert
[PTZ Control](#)
[Port](#)
[DDNS](#)
[SMTP/FTP](#)
[Trigger Setup](#)

Network

Static IP	Dynamic IP	PPPoE
Connection Method: Static IP		
IP Address	192.168.1.2	
Subnet Mask	255.255.255.0	
Gateway	192.168.1.1	
Default DNS	168.95.1.1	
<input type="button" value="OK"/>		

➤ IP Address


- Confirm with network administrator.

- Subnet Mask/Gateway/Default DNS
 - Confirm with network administrator.
- Always click "**OK**" to save changes in a particular page.
- Reboot is required and will be automatically triggered after you press "**OK**". Wait for count down timer to finish and page will refresh automatically and you should see initial login page.

Note:

Always use EtroScan™ to find the MAC address after reboot and double check the IP address is correct. If IP was changed in web configuration, you cannot return to initial login page after reboot.

DYNAMIC IP

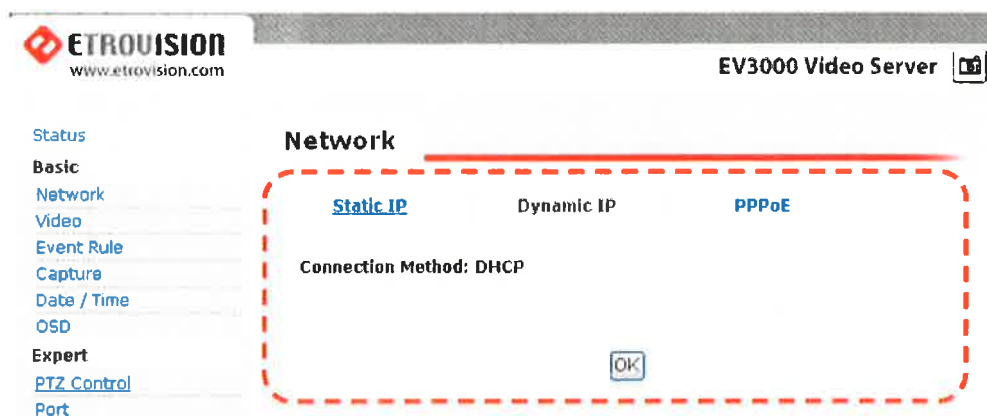

- If DHCP server is on LAN and you want to allocate Dynamic IP address, use DHCP.
- Click "**OK**" button.
- Reboot is required and will be automatically triggered after you press "**OK**". Wait for count down timer to finish and page will refresh automatically and you should see initial login page.

Note:

Always use EtroScan™ to find the MAC address after reboot and double check the IP

address is correct. If IP was changed in web configuration, you cannot return to initial login page after reboot.

PPPoE SETTINGS

The screenshot shows the 'Network' configuration page for the ETROVISION EV3000 Video Server. The 'PPPoE' tab is active. The configuration details are as follows:

Field	Value
Connection Method	xDSL
User ID	pppoe_user
User Password	●●●
Verify Password	●●●
MTU	1412
DNS Server	<input type="radio"/> Manual <input checked="" type="radio"/> Auto
DNS	

A red dashed box highlights the entire configuration area. A red message 'Password is matched' is visible next to the password fields.

- PPPoE is used in case network supports PPPoE like xDSL
- Request Internet Service Provider for PPPoE ID/Password
- User ID / Password
 - PPPoE user ID / Password
- Service Name
 - Service name of ISP
- MTU
 - Maximum transmission unit of data
- IP address of DNS sever can be set to be created automatically.
- If xDSL does not use static IP, you should use DHCP.

Wireless (**ONLY** for EV3130AW model)



Wireless

Enable

MAC Address 00:0E:8E:16:5C:58

Mode Station

PHY Configuration Profile 802.11b+g Mixed

Station Setting

SSID

uAP
GenieTek-Router
www.AnyUSB.com
ICE
ChemWireless

BSS Type Infrastructure

WEP Encryption 128bit

Authentication Type Shared Key

WEP Key Phrase Hex Digits

Wireless SETTINGS

- Enable
 - Click this check box to enable/disable wireless function
- MAC Address
 - MAC Address of wireless NIC is displayed here
- Mode
 - EV3130AW only support "Station mode" now
- PHY Configuration Profile

PHY Configuration Profile 802.11b+g Mixed

Station Setting

802.11b+g Mixed
802.11g Only
802.11b Only

- EV3110AW support "802.11b only"、"802.11g only" and


"802.11B+g only" three profile. Select correct item based on your Wi-Fi network type; if you are not sure, suggest to select "802.11B+g only" or contact your administrator

Station SETTINGS

➤ SSID


- Click "Search" bottom, after 8~12 sec, system will search available access point signals and list on the box below

Station Setting

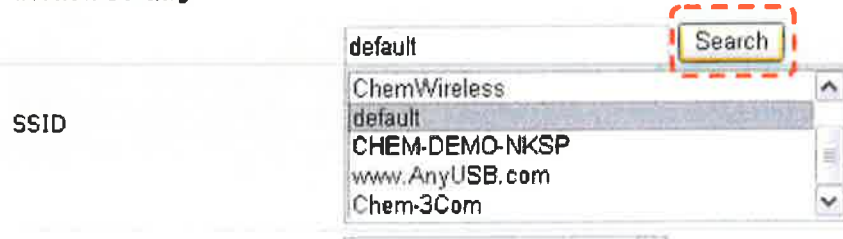


- Select the SSID of access point you want to link

➤ BSS Type

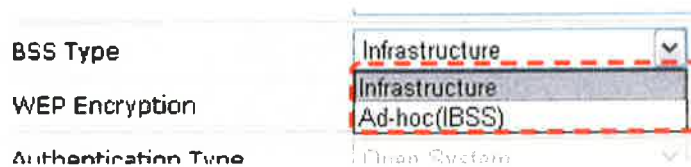

- EV3130AW supports BSS type "Infrastructure" & "Ad-hoc" mode; you can base on your wireless network environment to select specific item

➤ WEP Encryption

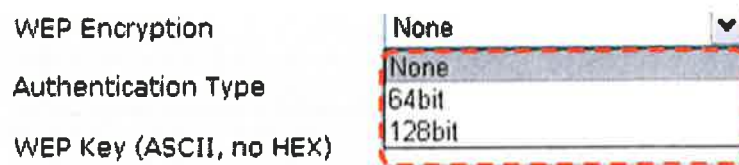

- If your access point need Wi-Fi WEP encryption for wireless association, select 64bit or 128bit encryption. Otherwise,

select none

➤ Authentication Type

Authentication Type

WEP Key (ASCII, no HEX)

- When selecting WEP encryption as 64bit or 128bit, please assign Wi-Fi authentication type as "Open System" or "Shared Key"

**If you are not sure your Wi-Fi network encryption type in detail, please contact with your network administrator

➤ WEP Key

WEP Encryption

Authentication Type

WEP Key Phrase

- Input WEP key

**EV3130AW WEP Key supports both ASCII input or Hex Digits

**When you input WEP key, you can find a dynamic text block below; you can use this to check whether or not your input is correct

➤ Verify Key

WEP Key Phrase

Verify Key Matched

- Input WEP Key again, and make sure system response "Matched" for correct WEP Key double input

NOTE

Remember to press "OK" after you have changed wireless settings. System will

guide you to go to setup WLAN IP address as following



Network



Select correct **wireless** IP address setting based on your AP router define; then click OK.




After setting, system will drive you to reboot process as following



Reboot

Rebooting, 39sec remained

After reboot, the WLAN will be activated and you can find the WLAN ip address via EtroScan

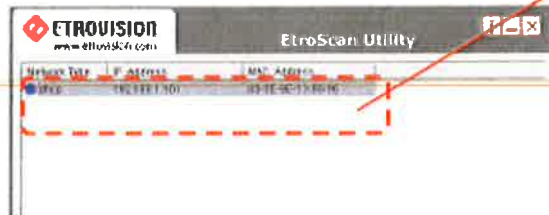

WLAN NIC ip
address

****To view WLAN ip address, make sure your PC is also successfully associated with WLAN Access Point**

NOTE

When WLAN successfully enabled and get ip address from AP router, EV3130AW system will automatically change ip address of wired network as "169.254.100.100"

Status	Status
Basic	
Network	
Wireless	Network Status (Wired)
Video	MAC Address 00:19:6C:30:04:99
Event Rule	IP Address 169.254.100.100
Scheduled Capture	Subnet Mask 255.255.255.0
Date / Time	Gateway 169.254.100.254
OSD	Default DNS 168.95.1.1
Expert	

The "Wireless" setting page refers to WLAN setting when WLAN is enabled; otherwise, it refers to wired setting when WLAN is disabled.

You can also setup your PC same as 169.254.100.XXX setting to access specific 169.254.100.100 ip address of EV3130AW when wireless is enabled.

VIDEO

The screenshot shows the 'EV3000 Video Server' web interface. The left sidebar contains a navigation menu with categories: Status, Basic, Network, Video (highlighted), Event Rule, Capture, Date / Time, OSD, Expert, PTZ Control, Port, DDNS, SMTP/FTP, Trigger Setup, Pre/Post Setting, SD Card, Account, Security, Maintenance, Factory Default, Reboot, and Logout. The main content area is titled 'Video' and is enclosed in a red dashed border. It is divided into two sections: 'Video Setting' and 'Color Setting'. The 'Video Setting' section includes: Video Compression Type (MPEG4), Resolution (D1), Frame Type (IP Only), Bitrate Type (Constant Bitrate selected), Bitrate (2M), Frame Per Sec (30), GOP Size (60), and Video Field Type (NTSC selected). The 'Color Setting' section includes a 'View Video' button and sliders for Brightness (130), Contrast (70), and Saturation (90).

VIDEO SETTINGS

- Video Compression Type
 - MJPEG / MPEG4
- Resolution
 - CIF / QCIF / D1
- Frame Types

This setting deals with the Group of Pictures (GOP) structure - which could be a combination of I and P frames.

I - I frames - also referred to as Key frames contain information for a complete picture, and can be decoded independent of any other frame. I frames are the largest (and least compressed) frames. Therefore for same quality, they consume high bit rate.

P - P frames are encoded using information from the previous I or P frame, and can only be decoded correctly if the previous I / P frame is available. P frames are smaller than I frames.

- I Only / IP Only

- IP - Simple Profile - Medium bit rates for same quality.

I - Highest bit rates for same quality.

**When choosing MJPEG streaming, ONLY support "I Only" mode

- Bit rate Type

- Constant and Variable bit rates control allows flexibility in choosing how much bandwidth is available on network and quality of video required.

- Constant Bit rates

- 3M / 2M / 1.5M / 1M / 750K / 500K / 384K / 256K / 128K / 64K / 32K

- Variable Bit rates

- 2 ~ 31 (quality is best in case value is "3")

- Frame per Second.

- 1 ~ 30

- Group Size

- Adjusts the ration between "I" frames and "P" frames. Lower the group size, better the quality.

- 5 / 10 / 15 / 30 / 60

- Video Type

- NTSC / PAL

**System can automatically detect input video signal when clicking detect icon

COLOR SETTINGS

Fine adjustments to video quality can be made using more detailed settings as shown below.

Brightness	-	130	+	(0 ~ 255)
Contrast	-	70	+	(20 ~ 127)
Saturation	-	90	+	(0 ~ 127)
Hue	-	0	+	(0 ~ 255)

BRIGHTNESS

Adjusts the image on a scale from darkness to brightness.

CONTRAST

Adjusts the extent to which adjacent areas on a video differ in brightness

SATURATION

Adjusts the chromatic purity of video thereby effecting vividness.

HUE

Adjusts the video by effecting color depth

VIDEO PREVIEW

Preview makes choices easier when tuning video settings for specific locations. By clicking the **View Video** button, you can see the following

Color Setting

Enable Preview

Click **Stop** to exit preview. You could change other video parameters and press **TEST** to see how the changes look like. You can press **Reset**

anytime to return back to the default settings. Click **Enable Preview** checkbox to save the current settings – and its takes effect right after settings have been changed.

MAX CLIENT LIMIT

Maximum users (client) limit allows users accessing the video stream. For higher bit rates and resolution, the client limit is much lower and vice versa.

- Maximum number of clients can be restricted depending on how much video quality is required and network band with is available.
 - 0 ~ 10 (value 0 means maximum allowable)

DO NOT FORGET TO PRESS “OK” BUTTON TO SAVE YOUR SETTINGS.

EVENT RULE

Basically, EV3130A/AW is capable of handling all standard events. EV3131 having limited input sockets (only PTZ), only handles motion detection, periodic timer, network loss, video loss and power loss.

Events handled by EV3131

1. Motion Detection
2. Periodic Timer
3. Network Loss
4. Video Loss
5. Power Loss

Actions supported by EV3131

1. PTZ Preset
2. E-mail Notification
3. Record (Record to Local SD Card)

	PTZ Preset	Email Notification	Record
Motion Detection	X	X	X
Periodic Timer	X	X	
Network Loss			X
Video Loss		X	
Power Loss		X	

Events handled by EV3130A/AW

1. Digital Input
2. Motion Detection
3. Periodic Timer
4. Network Loss
5. Video Loss
6. Power Loss

Actions supported by EV3130A/AW

1. Digital Output
2. PTZ Preset
3. E-mail Notification
4. Record (Record to Local SD Card)

	Digital Output	PTZ Preset	Email Notification	Record
Digital Input	X	X	X	X
Motion Detection	X	X	X	X
Periodic Timer	X	X	X	
Network Loss				X
Video Loss	X		X	
Power Loss			X	

[Status](#)
[Basic](#)
[Network](#)
[Wireless](#)
[Video](#)
[Event Rule](#)
[Scheduled Capture](#)
[Date / Time](#)
[QSD](#)
[Expert](#)
[PTZ Control](#)
[Port](#)
[DDNS](#)
[SMTP/FTP](#)
[Trigger Setup](#)
[Pre/Post Setting](#)
[Account](#)
[Security](#)
[Maintenance](#)
[Factory Default](#)
[Reboot](#)
[Logout](#)

Event Rule

Activated Event Rule

Trigger: Network Loss, Notification: Record(Parameter:1)(Interval(sec) 30)
Trigger: Periodic Timer, Notification: Email Notification(Interval(sec) 0)
Trigger: Power Loss, Notification: Email Notification(Interval(sec) 0)

Trigger and Handler

Motion Detection Periodic Timer Network Loss Video Loss Power Loss	Email Notification	[Settings for Email Notification] SMTP Server: smtp.mail.com SMTP Port: 25 Auth User: smtp Recipient's Email: user@smtp.mail.com Sender's Email: user@smtp.mail.com Enable Attachment: No
--------------------------------------------------------------------------------	--------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

EVENTS HANDLED

Digital Input

Can choose sensor type either "Normal Open" or "Normal Close"

Motion Detection

If motion is detected on the areas defined on the video stream, an event will be triggered based on the rule lists.

Periodic Timer

In a pre-defined time interval, an event will be triggered based on the rule lists.

Network Loss

When system detect network loss, an event will be triggered

Video Loss

When system detect Video loss, an event will be triggered

Power Loss

When system detect system power loss, an event will be triggered

ACTIONS TRIGGERED

Digital Output

Can active digital output.

PTZ Preset

PTZ set to a particular preset value can be triggered based on occurrence of an event listed out in "**Rule Lists**".

E-mail Notification

E-mail can be sent based on occurrence of an event listed out in "**Rule Lists**".

Record (Record to Local SD)

When event triggered, system will record streaming to plugged SD card.

RULE LISTS - ADDING/DELETING

Select an event and select corresponding action. Click **add** button and notice that is added in the **Rule lists** Information box.

MODIFYING RULE LISTS

Rule list items can be deleted individually or wholly by clicking **Delete All** button.

SCHEDULED CAPTURE

Choose **Enable** checkbox to record snapshot by schedule or event triggered way.

Schedule capture

- Select schedule day check boxes (can multi-select)
- Define start and end time
- Define related output parameter, such as interval time, save path ...

The screenshot displays the web interface for the ETROVISION EV3000 Video Server. The page title is "Scheduled Capture". On the left, there is a navigation menu with the following items: Status, Basic, Network, Wireless, Video, Event Rule, Scheduled Capture (highlighted), Date / Time, OSD, Expert, PTZ Control, Port, DDNS, SMTP/FTP, Trigger Setup, Pre/Post Setting, Account, Security, Maintenance, Factory Default, Reboot, and Logout. The main content area is titled "Scheduled Capture" and contains the following settings:

- Enable:**
- Schedule:** A dropdown menu showing "Schedule".
- Schedule Day:** A list of days with checkboxes: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, and Sunday. All checkboxes are currently unchecked.
- Start Time:** 8:00
- End Time:** 18:00
- Trigger By:** (This field is empty in the screenshot)
- Output Type:** FTP Upload (with a link to "[Settings for FTP Upload]")
- Interval Time(secs):** 30
- Filename Prefix:** EV3000
- Save Path:** CAPTURE (one layer)
- FTP Settings (from the dropdown):**
 - FTP Server: 192.168.1.1
 - FTP Port: 21
 - Login User: ftuser
 - Change Settings button

DATE & TIME

[Status](#)
[Basic](#)
[Network](#)
[Wireless](#)
[Video](#)
[Event Rule](#)
[Scheduled Capture](#)
[Date / Time](#)
[OSD](#)
[Expert](#)
[PTZ Control](#)
[Port](#)
[DDNS](#)

Date / Time

Date / Time

Server Time 2000-01-20 08:44:36

Time Zone (GMT +08:00) Taipei

Client PC Time 2008 . 1 . 29 . 13 . 31 . 22

Time Server time.windows.com

- Date and time settings can be synchronized with PC directly by clicking "Client PC time" check box. Click "**OK**" after you have made selection.

Client PC Time 2007 . 9 . 3 . 19 . 15 . 48

- Time zone can be chosen by choosing either of the two time servers listed
- Either of the two time servers can be chosen to synchronize video server time. They are listed as follows should you choose **Time Server**. Click "**OK**" after you have changed settings.

Time Server time.windows.com

pool.ntp.org

time.windows.com

Other

- If you want to manually input time server, choose "**Other**" then you can find a manual input edit box appear. Key in your preferred time server and click "**OK**".

Time Server Other

User Assign sdu3-NTP1.fvrtg.org

OSD

Click on your desired choice of color. Values will change accordingly for R, G, and B. If you desire some other color, you can manually define those corresponding R, G, B values in the boxes as appropriate. Position of OSD can be changed by defining the X, Y values. Date & Time can be individually enabled/disable by "Date" & "Time" checkboxes.

ETROVISION
www.etrovision.com

EV3000 Video Server

OSD

Text Color

Foreground Color

Red: 255 (0~255)

Green: 255 (0~255)

Blue: 255 (0~255)

OSD Position

X Axis: 20 (10 ~ 620)

Y Axis: 10 (10 ~ 420)

Date

Enable

Time

Enable

Channel Name

Channel name can be shown/hidden by the channel name "Enable" checkbox. It can be manually typed in the "Channel name" text box and changes can be noticed.

Channel Name

Enable

Channel Name: EV3000

OK

PTZ CONTROL

[Status](#)
Basic
[Network](#)
[Wireless](#)
[Video](#)
[Event Rule](#)
[Scheduled Capture](#)
[Date / Time](#)
[OSD](#)
Expert
[PTZ Control](#)
[Port](#)
[DDNS](#)
[SMTP/FTP](#)
[Trigger Setup](#)
[Pre/Post Setting](#)
[Account](#)

PTZ Control

Channel 1

Channel Model (PTZ Model)

Channel ID(Rx Address)

Baud Rate

Data Bits

Parity

Stop Bits

➤ Channel Mode (PTZ model)

- Default is none.
- PelcoP / PelcoD / Merit-Lilin / Transparent / Visca can be chosen.

Channel Model (PTZ Model)	none
Channel ID(Rx Address)	none
Baud Rate	Transparent
Data Bits	PelcoP
	PelcoD
	Merit_Lilin
	Visca

➤ Channel ID

- Give address value - default is zero.

➤ Baud rate / Data bits / Parity / Stop bits

- Depending on the protocol used, the values of baud and related settings are to be assigned accordingly.

PORT

The values of WEB and AV port can be changed as necessary.

[Status](#)**Basic**[Network](#)[Wireless](#)[Video](#)[Event Rule](#)[Scheduled Capture](#)[Date / Time](#)[OSD](#)**Expert**[PTZ Control](#)**Port**[DDNS](#)

Port

Web

Web Port

Video + Audio

AV Port

Web

- Web Port default is 80

Video + Audio

- Default AV Port is 1852 for video/audio data transmission.

DDNS

[Status](#)**Basic**[Network](#)[Wireless](#)[Video](#)[Event Rule](#)[Scheduled Capture](#)[Date / Time](#)[OSD](#)**Expert**[PTZ Control](#)**Port****DDNS**[SMTP/FTP](#)[Trigger Setup](#)

DDNS

IPv4 DDNS

Enable Which Service ddns.nu dyndns.org

dyndns.org

Hostname DDNS ID DDNS Password

DDNS is the function that maps an IP address to a host name. If EV3131

/ EV3130A/AW are set to dynamic IP address, the host name by DDNS (Dynamic Domain Name Service) must be used instead of the IP address for credibility of network connection.

IPv4 DDNS

- Check "**Enable**" and select a service out of available two.
- Both services are required to register some items on each DDNS service site.
- For use of "**ddns.nu**" register at www.ddns.nu and for **dyndns** find the information at dyndns.org

SMTP/FTP

ETROVISION
www.etrovision.com

EV3000 Video Server

[Status](#)

Basic

[Network](#)

[Wireless](#)

[Video](#)

[Event Rule](#)

[Scheduled Capture](#)

[Date / Time](#)

[OSD](#)

Expert

[PTZ Control](#)

[Port](#)

[DDNS](#)

[SMTP/FTP](#)

[Trigger Setup](#)

[Pre/Post Setting](#)

[Account](#)

[Security](#)

[Maintenance](#)

[Factory Default](#)

[Reboot](#)

[Logout](#)

SMTP/FTP

Remote SMTP Setup

SMTP Server: smtp.mail.com

SMTP Port: 25

Authentication:

Auth User: smtp

Auth Password:

Sender's Email: user@smtp.mail.com

Recipient's Email: user@smtp.mail.com

Enable Attachment:

Remote FTP Setup

FTP Server: 192.168.1.1

FTP Port: 21

Auth User: ftpuser

Login Password:

An e-mail notification & FTP upload service offered by EV3131 / EV3130A/AW notifies events or uploads snapshots to a remote FTP server.

E-MAIL – SMTP SETTINGS

Fill in the details of SMTP server such as port number, user name, password, server name information. If you would wish to send attached snapshots, please check the appropriate check box.

Sometimes Authentication is not always required by SMTP servers.

Wherein only the SMTP server name and e-mail address details are enough to be input.

Remote SMTP Setup

SMTP Server	<input type="text" value="smtp.mail.com"/>
SMTP Port	<input type="text" value="25"/>
Authentication	<input checked="" type="checkbox"/>
Auth User	<input type="text" value="smtp"/>
Auth Password	<input type="password" value="••••••••"/>
Sender's Email	<input type="text" value="user@smtp.mail.com"/>
Receipient's Email	<input type="text" value="user@smtp.mail.com"/>
Enable Attachement	<input type="checkbox"/>

FTP SETTINGS

Fill in the details of remote FTP server, port number and user name, password.

Remote FTP Setup

FTP Server	<input type="text" value="192.168.1.1"/>
FTP Port	<input type="text" value="21"/>
Auth User	<input type="text" value="ftpuser"/>
Login Password	<input type="password" value="••••••••"/>

TRIGGER SETUP



EV3000 Video Server 

Status

Basic

Network

Wireless

Video

Event Rule

Scheduled Capture

Date / Time

OSD

Expert

PTZ Control

Port

DDNS

SMTP/FTP

Trigger Setup

Trigger Setup

Digital Input

Periodic Timer

Motion Detection

Video Loss

Digital Input

Sensor Type

N.O (Normal Open) N.C (Normal Close)

OK

Three different types of EVENTS can be configured.

Digital INPUT

Can be **Normal OPEN (N.O)** or **Normal Close (N.C)**

Choose based on the type of input and press **OK** to save the settings.

PERIODIC TIMER

Timer interval can be set in terms of seconds. This will trigger an event when the time out is achieved.

Trigger Setup

Digital Input

Periodic Timer

Motion Detection

Video Loss

Periodic Timer

Time Interval(secs)

60

OK

MOTION DETECTION

➤ Enable type

- Can enable motion detection by "always" or "schedule" mode
- When choosing schedule mode, define schedule day and start/end time

Trigger Setup

[Digital Input](#) [Periodic Timer](#) **Motion Detection** [Video Loss](#)

Input Setting

Enable

Enable Type ▼

Schedule Days

- Monday
- Tuesday
- Wednesday
- Thursday
- Friday
- Saturday
- Sunday

Start Time : :

Stop Time : :

➤ Detection Area

- Total viewing screen area is divided into 9 square blocks and each of them is called area 1, area 2 etc., Click specific areas you want motion detection to be enabled. If a detection area is selected color changes to dark gray.

Stop Time

08:01:37
09:08:37
EV:0000

Detect Area

1	2	3
4	5	6
7	8	9

Selected (Red)

➤ Sensitivity value

- Defines sensitivity of the motion detection. The range of the value is 1 to 100.

➤ Motion Vector value

- To detect even slightest movement for objects in selected area, please select a lower motion vector value. The range of the value is 3750 to 4650.

➤ SAD value.

- To only detect flashing light or any such significant activities on immovable objects, low SAD value should be chosen. In most cases, high SAD level is recommended. The range of the value is 20 to 150.

Sensitivity	<input type="text" value="20"/>	(1 ~ 100)
Motion Vector	<input type="text" value="4000"/>	(3750 ~ 4650)
SAD	<input type="text" value="80"/>	(20 ~ 150)

OK

Motion detection enabled areas look as shown below. A simple click can select any of the boxes on detect area.

Video Loss

Can config how much time system should trigger an event for video loss

Trigger Setup

Digital Input

Periodic Timer

Motion Detection

Video Loss

Video Loss

Trigger when loss is more than secs

OK

PRE/POST SETTING

These parameters decide Pre/Post buffer stream format type and duration.

Administrator can choose format as "AVI Video" or "JPEG Picture" with Pre/Post time duration

The screenshot shows the 'Pre/Post Setting' configuration page. On the left is a navigation menu with categories: Status, Basic, Network, Wireless, Video, Event Rule, Scheduled Capture, Date / Time, OSD, Expert, PTZ Control, and Port. The main content area is titled 'Pre/Post Setting' and contains the following fields:

- Format:** AVI Video (dropdown menu)
- Pre-record Time:** 5 secs (5-10) (spinners)
- Post-record Time:** 5 secs (5-10) (spinners)
- Output Type:** Local SD Card (dropdown menu) with a [Show Settings](#) link

An 'OK' button is located at the bottom of the configuration area.

SD CARD

Only EV3130A/AW support SD card interface, system will show current SD card capacity information if SD card is plugged in socket well.

The screenshot shows the 'SD Card' configuration page. The left navigation menu is identical to the previous page. The main content area is titled 'SD Card' and features a 'Records' table and a 'Format SD Card' button.

Record Type	Num of files	Size
picture	0	
video	0	

Below the table is a 'Format SD Card' button. To the right of the table, the text reads: 'total: 14514 KB, Used: 0 KB, Free: 14514 KB'.

Red dashed boxes and arrows highlight specific elements:

- A red dashed box encloses the 'Records' table. A red arrow points from this box to the text: **Recorded files folder information**.
- Another red dashed box encloses the capacity information text. A red arrow points from this box to the text: **Plugged-in SD card capacity information**.

At the bottom of the page, there is a 'Format SD Card' button and a navigation arrow pointing to 'Format SD Card'.

- Click this icon, system will automatically format SD card and create "picture" & "video" folders.
- View recorded picture
 - If SD stored recorded picture files, enter picture link and choose which picture file you desire to view. You will view picture via image viewer SW (ie. Windows Image Viewer)
- Playback recorded video
 - If SD stored recorded video files, enter video link and choose which picture file you desire to playback; Windows will guide you to open/download video file (.AVI format) so that you can playback file via video decoder SW (ie. Windows Media Player)

Note: *Following SD card are fully evaluated in Etrovision engineering lab for compatibility test*

SD 1.1

- Sandisk 512MB
- Transcend 1GB
- ADATA 2GB
- Sandisk 2GB


SD 2.0

- ADATA SDHC 4GB
- Transcend SDHC 4GB
- Transcend SDHC 8GB


ACCOUNT

Administrator can create user accounts. Login as an administrator and create user accounts by pressing "**Add**". Each account has PTZ, Video settings and Digital Out privileges. They can be turned on or off anytime by the administrator.

There are limits on user name and password length and will be notified by dialog boxes if the user name/password exceeds or under-runs that limit.

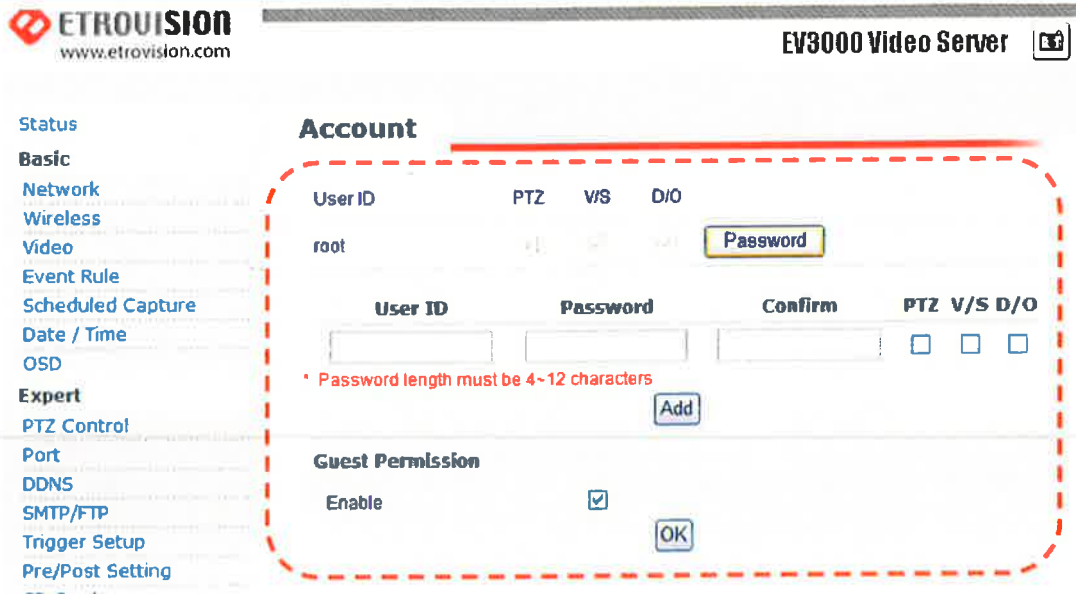

For each account, guest permissions can be turned ON/OFF. Any time, an account's settings can be modified by pressing the related button.

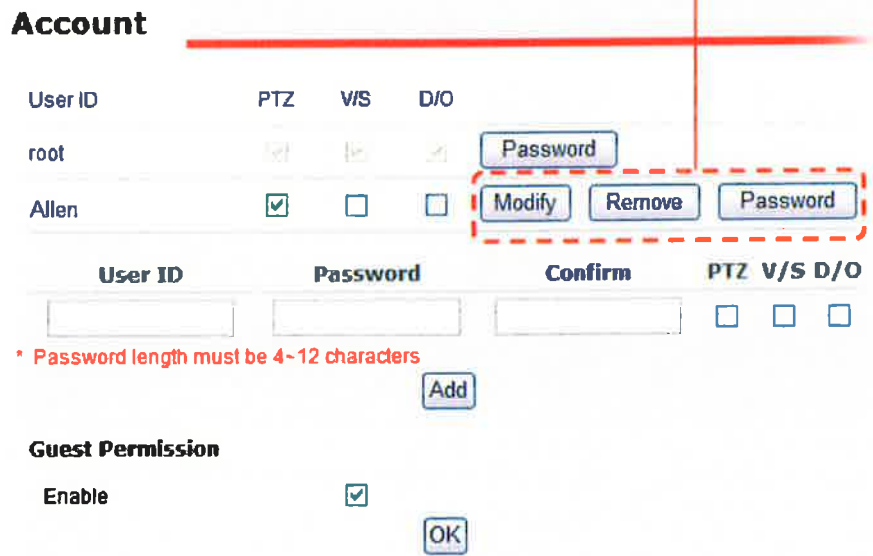

Administrator account can also be modified by the same modify button.

Changing password needs confirmation.

Account Limitations

- Administrator can add up to a maximum of 5 users and assign properties for each of them.

Guest Permissions

- Guest account can be turned ON/OFF anytime.

SECURITY

The basic settings are **LOW** by default.

ETROVISION
www.etrovision.com

EV3000 Video Server

Security

Security Level

- HIGH Only connections from the local area
- MEDIUM Video and Audio connections from any place. Setting connections from the local area
- LOW All connections from any place

Power LED

- Turn On Power Led is always turned on when power is on
- Turn Off Power Led would be turned off for security consideration.

OK

- Security Level
 - HIGH
 - ◆ ONLY LAN connections are allowed.
 - MEDIUM
 - ◆ Video and audio connections from any location and settings from LAN are permitted.
 - LOW

- ◆ All connections from any location are permitted.

➤ Power LED

■ Turn On

- ◆ Default value, power LED will always be on during operation.

■ Turn Off

- ◆ Config power LED as off during operation.

MAINTENANCE

Language

- Default settings are in English. Another choices are :
 - Traditional Chinese
 - Deutsch
 - Simplified Chinese



Firmware update

- Firmware update binary file can be obtained from Etrovision

Technology. Choose that and click **upload**. When uploading is done, reboot is required and will be automatically triggered.

CAUTION

DO NOT power off during upgrade process, follow system dialog to finish upgrade procedure

System Configuration (Backup/Restore)

- You can backup current configuration profile as a file and restore any stored configuration profile.

9. FACTORY DEFAULT

After a confirmation dialog box, clicking **OK** button, will load default settings and do a reboot. You will see the reboot countdown timer running. Once done, you will see the login page. Please login with root/pass.



10. REBOOT

If you click **OK** on the dialog box, you will see the reboot countdown timer running. Once done, you will see the login page. Please login with root/pass or other appropriate login information.



11. LOGOUT

To return to the login screen, simply click **logout**. You should see yourself in the login page within seconds.

12. ETROLINK™ Config Port - FIRST TIME EXPERIENCE

If video server has to be quickly configured or has to be set to factory default settings, Etrolink™ config port is used to achieve that. Etrolink™ config port is a special USB port.



Insert mini USB cable onto Etrolink config port and connect other end to PC. When video server is powered on, Etrolink will not be operational. Once you are done working with Etrolink™ config port, remember to unplug USB cable from Etrolink™ config port.

NOTE

REMOVE USB CABLE WHEN YOU ARE FINISHED WITH QUICK CONFIGURATION.

SUPPORTED OS

PC running the following operating systems can support auto run of **Quick Config** application.

1. Windows XP (all editions) - auto run.
2. Windows 2000 (all editions) – needs to be manually run.
3. Windows 98 (SE) – needs to be manually run

(Generic USB mass storage class driver (Microsoft) will be requested – prepare one in prior if you plan to use Etrolink™ based device recovery on Windows 98)

NO SOFTWARE INSTALLATION REQUIRED

There is no installation or setup of any software for Windows XP/2000 platforms.

STEPS FOR USING ETROLINK™ config port (Windows XP PC)

1. Disconnect **power cable** connected to EV3131 / EV3130A/AW.
2. Use mini-USB cable and connect appropriate end to Etrolink™ config port and connect other end to PC USB port.




3. After 5 ~ 10 seconds depending on how fast your PC is, you can notice "**Disk drive**" being detected.



4. A POP-UP dialog shows "**Config Wizard**" is ready to run. Press OK.



5. Double click Config Wizard. You will see a screen as follows.

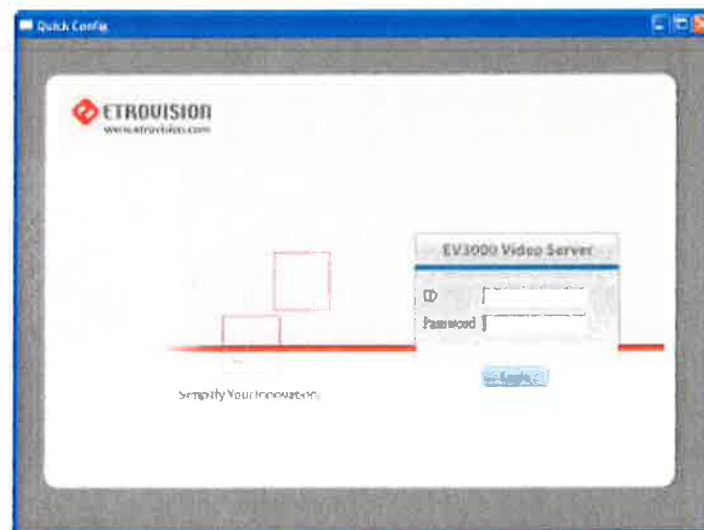

You will be asked for password. Earlier, if you have never changed the password for user **root**, please type **pass** as the password. Then click **login** button. If you input wrong password, you will get this dialog box.



Quick Config EV3000 Video Server

ETROVISION
www.etrovision.com

Status

System Information

Network Type: DHCP

Wireless Information

Enable: no

Mode: Station

PHY Configuration Profile: 802.11b+g Mixed

SSID: (Not Set)

BSS Type: Infrastructure

WEP Encryption: None

Authentication Type: Shared Key

ONLY for EV3130AW

Quick Wizard | Change Password | Factory Default

You will see the network status of EV3131 / EV3130A/AW .To navigate through Quick Wizard, click it and you will find a window appear as below.

Quick Config EV3000 Video Server

ETROVISION
www.etrovision.com

Setup Wizard

Network DDNS

Step 1: Wireless Configuration

Enable:

Mode: Station

PHY Configuration Profile: 802.11b+g Mixed

SSID:

BSS Type: Infrastructure

WEP Encryption: None

Authentication Type: Shared Key

WEP Key (ASCII, no HEX):

Back | Next

If EV3130AW, you will see WLAN configuration page; config WLAN setting in this page and click next to go on


If you would wish to change network settings of either **STATIC / DHCP / PPPoE**

If you would want to setup **DDNS**, please click on the same for detailed configuration.

Return to Network page to setup network further.

Please choose and click **next** for detailed configuration page.

For instance, shown below is a screen which has **STATIC** network configuration page. Click next to proceed.

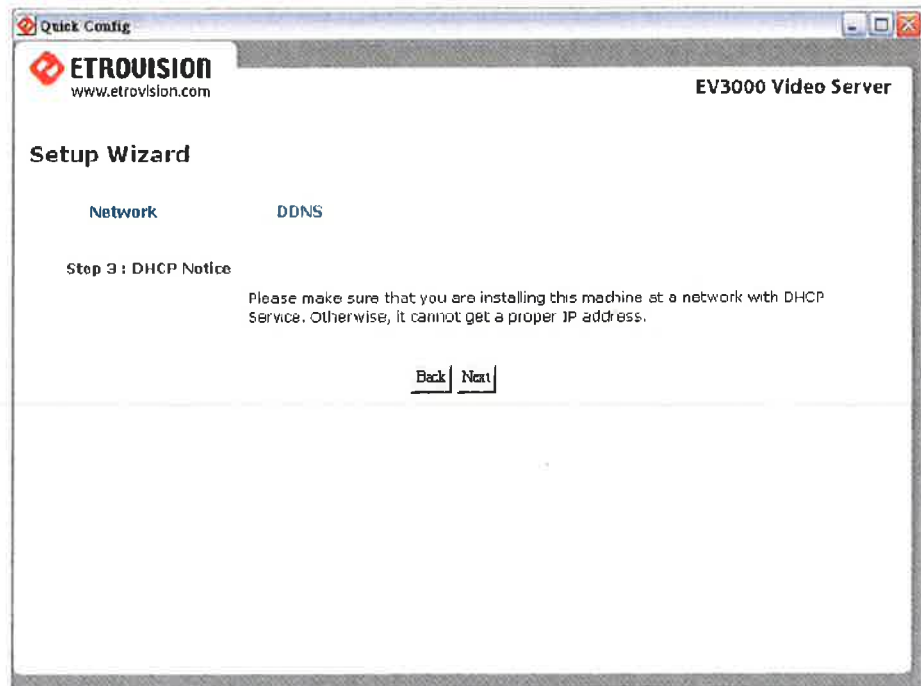

Clicking next will show that settings are saved. You can click finish if you are done or go back or change other settings. Similarly you can change other settings at ease.



Note:

- Connect EV3131 / EV3130A/AW to your network by using a standard Cat-5 cable.
- Connect the video output of your camera with video in of video server, using standard 75Ω coaxial cable with BNC type connector.
- Connect speaker and active microphone to Audio Out/In.

WHAT IF QUICKCONFIG DOES NOT AUTORUN?

In some PC, after connecting USB cable with Etrolink™ port, there might not be auto run of Quick Config application.

In that case, just open disk drive which looks like shown on screenshot below. It should have volume name starting with EVxxxx.



Open up a folder named "**autorun**". That folder contains a HTML executable file named "**autorun**". Double click that to run. You will find that it is the same "**Quick Config**" application is running. See the

screenshots below to find that file on the disk drive.



etrosales@etrovision.com

TEL: +886-2-26551518

2F, Block C, Nan Kang Software Park,
19-5 San-chung Rd., Nan Kang District,
Taipei 115, Taiwan